



MCB Accessories

Overview

- Full range of modules to provide remote monitoring.
- The special design makes it easy to assemble and install.
- Each MCB can be assembled with 2 release and 3 indicating accessories with 1 group of contacts or 2 indicating modules with 2 groups of contacts.

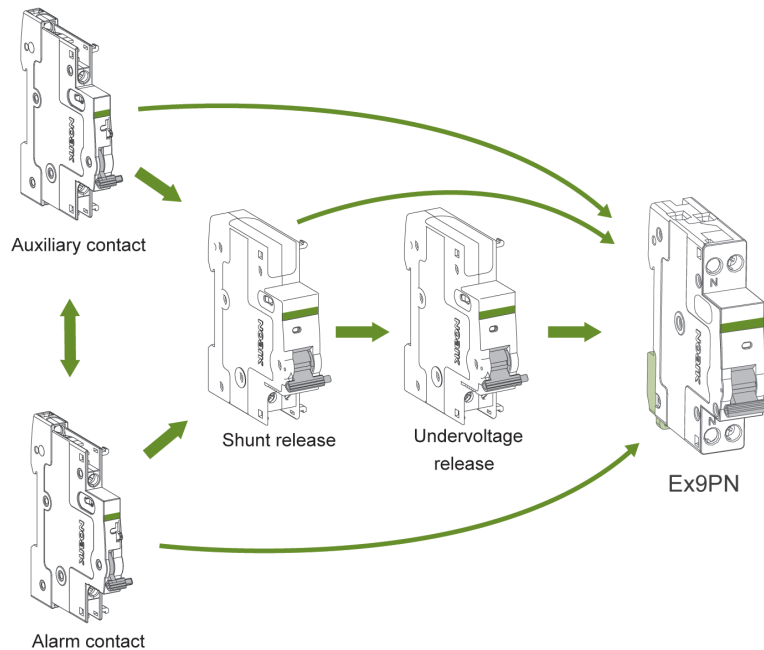

ExBP/Ex9PN/Ex9BP modules

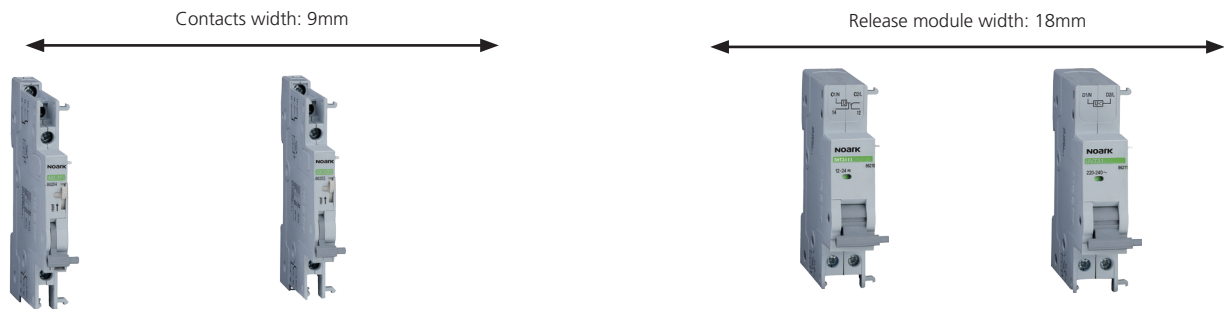

Alarm contact AL31/AXL31

Auxiliary contact AX31

Shunt release SHT31

Undervoltage release UVT31

Alarm contact AL3111/AXL31

Function

Combine the alarm contact module with an MCB so that when the MCB trips, an audible or visual indicator can be activated to indicate the fault trip. The AXL31 has both the function of an auxiliary and alarm.

Auxiliary contact AX3111/AX3112

Function

Combine the auxiliary contact with the MCB to provide remote indication of a circuit breaker's status: ON or OFF.

Shunt release SHT31/SHT3111

Function

Combine the shunt release module with an MCB to trip the MCB remotely.

Undervoltage release UVT31/ UVT310/UVT3110

Function

Combine the undervoltage release module with an MCB so when the voltage decreases by 70%-35%, the release makes the breaker trip; only when the voltage resumes to 85%-110% does it restore the breaker to an ON status.

Rated current of AL31/AXL31/AX31

	Working voltage (V)	Rated current (A)
AC	240	6
	415	3
DC	24	6
	48	2
	130	1

Locking Device

Part No. 86218



MCB Accessories

Add on blocks

Shunts, alarms and auxiliaries


Part No.	Control Voltage		Width (mm)	Type code	Type
	V AC	V DC			

Shunt release SHT31 (without auxilliary contact)

86205	110-415	110 - 130	18	SHT31 110V-415V AC/110V-130V DC
86206	48	48	18	SHT31 48V AC/DC
86207	12-24	12-24	18	SHT31 12-24V AC/DC

Shunt release SHT3111 (with 1NO AND 1NC auxilliary contact)

86208	110-415	110 - 130	18	SHT3111 110V-415V AC/110V-130V DC
86209	48	48	18	SHT3111 48V AC/DC
86210	12-24	12-24	18	SHT3111 12-24V AC/DC

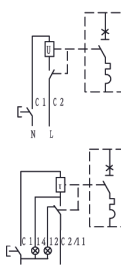

Shunt Release SHT

Undervoltage release UVT31 (without auxilliary contact)


86211	220-240		18	UVT31 220-240V AC
86212	48	48	18	UVT31 48V AC/DC

Undervoltage release UVT3101 (with 1NC auxilliary contact)

86213	220-240		18	UVT3101 220-240V AC
86214	48	48	18	UVT3101 48V AC/DC

Undervoltage release UVT3110 (with 1NO auxilliary contact)

86215	220-240		18	UVT3110-220-240V AC
86216	48	48	18	UVT3110 48V AC/DC

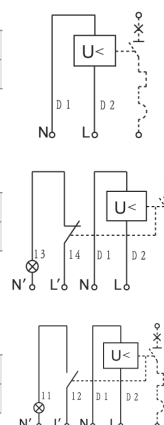


Undervoltage release UVT

Alarm contact AL3111 (with 1NC and 1NO)

86202			9	AL3111
-------	--	--	---	--------

86204			9	AXL31
-------	--	--	---	-------

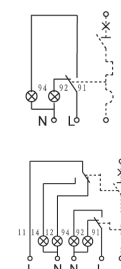


Alarm contact AL/AXL

Auxiliary contact AX3111 (with 1NC and 1NO)

86201			9	AX3111
-------	--	--	---	--------

Auxiliary contact AX3122 (with 2NC and 2NO)

86203			9	AX3122
-------	--	--	---	--------

 

Auxiliary contact AX